

ARCUS

TOUCH KITCHEN FAUCET WITH PULL-DOWN SPRAYER

Signature Faucets
[END THE ORDINARY.]

ACTIVATION: TouchSense™ — Touch on / Touch off

SPOUT: Gooseneck, High-Arc · 360° Swivel

RANGE: Kitchen Faucets

Bring innovation and elegance to your kitchen with the Arcus touch kitchen faucet. Start or stop the water with a simple touch, switch the dual-function pull-down sprayer from a gentle stream to a powerful spray, and reach the whole sink with the 360° swivel high-arc spout — premium stainless steel, lead-free construction.

FINISHES

	Brushed Nickel	SF-KF-21851-1
	Brushed Gold	SF-KF-21851-3
	Matte Black	SF-KF-21851-2
	Gunmetal Gray	SF-KF-21851-18
	Matte Black & Brushed Gold	SF-KF-21851-5
	Chrome	SF-KF-21851-0

POWER

Powered by 4x AA batteries (not included) · Auto shutoff after 3 minutes · Manual mode fallback



MATTE BLACK



BRUSHED GOLD




BLACK & GOLD



CHROME



GUNMETAL GRAY

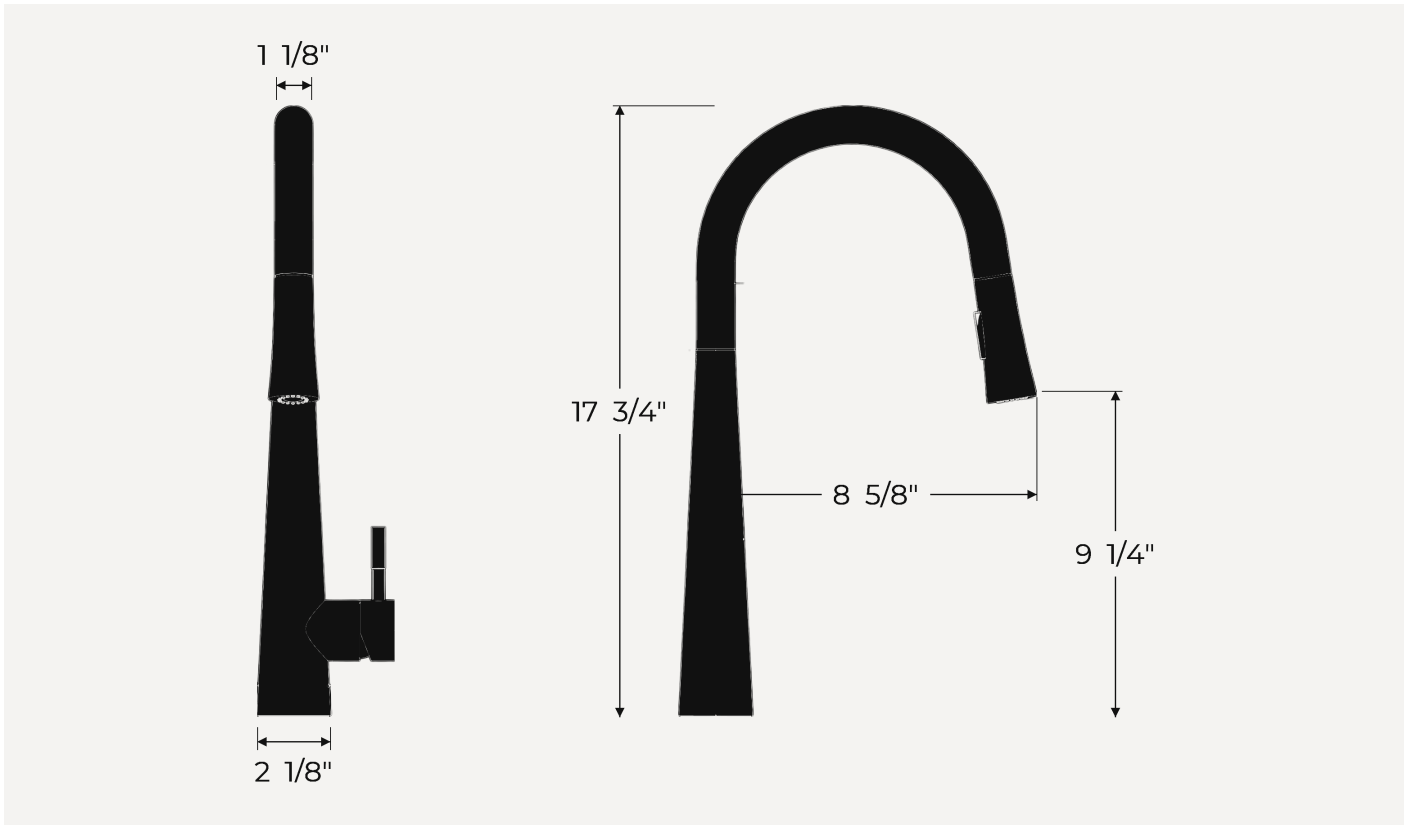

SPECIFICATIONS

Product Type	Kitchen Faucet
Spout	Pull-Down · Gooseneck, High-Arc · 360° swivel
Spray Modes	Stream, Spray (Rocker Switch)
Docking	Gravity Ball, Magnetic Dock
Activation	Touch (Capacitive sensor)
Handles	1, Lever
Valve	Ceramic Disc
Flow Rate	1.8 GPM @ 60 PSI
Body Material	Stainless Steel
Spray Head Material	Stainless Steel
Mounting	Deck Mount · Single Hole
Connection	3/8" Compression (G9/16")
Lead-Free	Yes
Deck Plate	Not included
Warranty	5-Year Parts, 2-Year Electronics

DIMENSIONS

Overall Height	17 3/4"
Spout Height	9 1/4"
Spout Reach	8 5/8"
Max Counter Thickness	1 1/2"
Spray Hose Length	63"
Supply Line Length	27 9/16"

INCLUDED IN THE BOX

— Kitchen Faucet	— Gravity Ball
— Faucet Shank	— Mounting Nut
— Spray Hose	— Mounting Screws (x2)
— Mixer Pipe	— Upper Washer
— Hot Flexible Supply Hose	— Bottom Washer
— Cold Flexible Supply Hose	— Metal Washer
— Quick Connect Fitting	— Rubber Washer (x2)
— Touch Sense Sensor	— O-ring Seal
— Battery Box	— Installation Manual
— Battery Box Mounting Kit	

CERTIFICATIONS

cUPC® (IAPMO) · ASME A112.18.1M · NSF/ANSI 61 · NSF/ANSI 372 · California AB1953 · CE

PLEASE NOTE

The touch sensor distinguishes an intentional tap from a grip, preventing accidental activation while adjusting the faucet. If batteries run low, the faucet switches to standard manual operation.

CARE INSTRUCTIONS

Wipe with a soft, damp cloth. Avoid detergents, acids, polishers, abrasives, and coarse cloths. Finishes may age naturally with time and regular use.

WARRANTY

5-year warranty on parts · 2-year on touch electronics · US residential installations · Claims at signaturefaucets.com/pages/warranty-claim